

CHNT RT28、RT29、NRT28

Mounting Instructions

Paigaldusjuhised

инструкции за монтаж

Instrukcja montażu

Montageanleitung

Инструкция по монтажу

instructions de montage

asennus-ja käyttöohjeet

instruções de montagem

Monteringsveiledning

Montážní návod

Istruzioni di montaggio

instrucciones de montaje

Щодо монтування

Montaj Talimatları

Οδηγίες Εγκατάστασης

Instrucțiuni de montare

Monteringsanvisning

Montage instructies

Monteringsvejledning

Istruzzjonijiet ta ' muntagġ

Szerelési utasítás

Montāžas instrukcijas

Montavimo instrukcijos



Caution: Installation by electricians only

Ettevaatust: paigaldus elektrikud ainult

Внимание: инсталиране от електротехницисамо

Uwaga: Instalacja tylko przez wykwalifikowany personel

Vorsicht: Installation nur durch den Elektriker

Предупреждение: монтаж должен выполняться только квалифицированным электротехническим персоналом

ATTENTION : l'Installation par du personnel qualifié seulement

Varoitus: asennus sallittu vain sähköalan ammattilaiselle

Atenção: instalação pelos eletricistas somente

Advarsel: monteres kun av elektrikere

Varování: Montáž pouze osobou s elektrotech. kvalifikací

Attenzione: installazione solo da parte di personale addestrato

PRECAUCIÓN: instalación por electricistas sólo

Увага: монтаж електрики тільки

Dikkat : Kurulum sadece elektrikçiler tarafınca yapılmalıdır.

Προσοχή: εγκατάσταση να γίνεται από ηλεκτρολόγους μόνο

ATENȚIONARE: instalarea de electricieni numai

Varning: Monteras av behörig elektriker

Let op: installatie door electriciens alleen

Advarsel: monteres kun af elektrikere

Attenzjoni: installazzjoni mill-elettriciisti biss

Figyelmeztetés: a telepítés a villanyszerelő csak

Piesardzigi: iekārtas, elektriķiem, tikai

Įspėjimas: montavimą privalo atlikti elektrikai

RT28、 RT29、 NRT28

Fuses

Kaitsmed

Предпазител

Bezpieczniki

Sicherung

Предохранитель

Fuses

Sulakkeet

Fusível

Sikring

Pojistka

Fusibile

Fusible

Запобіжники

Sigorta

Φυσιγγια ασφαλειών

Siguranțe

Säkring

Zekeringen

Sikring

Mičec

Biztosítékok

Drošinatāji


Saugikliai



NRT28-32 1P



 RT28N-32 1P



NRT28-125 1P

1

 
Installation
Paigaldamine
Инсталляция
Instalacja
Installation
Установка

Installation
Asennus
Instalação
Installasjon
Instalace
Installazione

Instalación
Встановлення
Kurulum
Εγκατάσταση
Instalare
Installation


Installatie
Installation
Installazzjoni
Telepítés
Uzstādišana
Montavimas

(mm)




	RT29-16	RT28-32	RT28-63	RT29-125
L1	31.5±0.5	38±0.6	51 ^{+0.6} _{-1.0}	58 ^{+0.1} _{-0.2}
L2	ø8.5±0.1	ø10.3±0.1	ø14.3±0.1	ø22.2±0.1



1-RT28、RT29

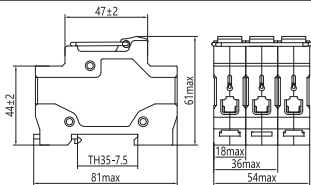



2- RT28N-32(X)

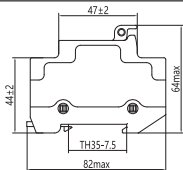


3- NRT28-32(X)

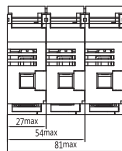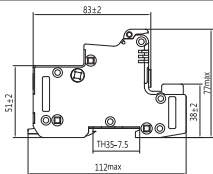


4- NRT28-63

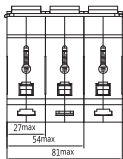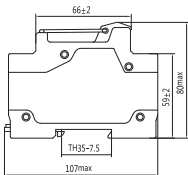


5- RT28-63(X)

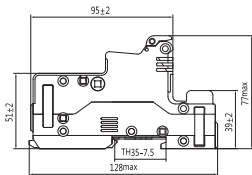


6- NRT28-125

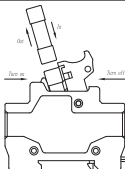

 

7- RT28N-32

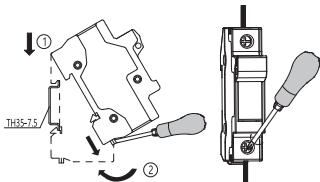

8- RT28、RT29、NRT28



	 mm ²	 N.m
RT28N-32(X)	1~6	2
NRT28-32(X)		
RT28-63(X)	1~16	
NRT28-63		
NRT28-125	1.5~50	2.5

9- RT28、NRT28

Zhejiang Chint Electrics Co., Ltd.

Add: No.1, CHINT Road, CHINT Industrial Zone, North Baixiang,
Yueqing, Zhejiang 325603, P.R.China

E-mail: global-sales@chint.com

Website: <http://en.chint.com>

**RT28、
RT29、
NRT28**

